

# GIPRO ATRE GEAR INDICATOR

## Supplementary Manual

### Kawasaki Z900 2017- (GPAT-K06)


Secure the bike on a stand.



Locate the Black, 3-pole gear position sensor connector near the shift linkage.



Remove the chain cover and route the GPAT G2 harness to the plug.

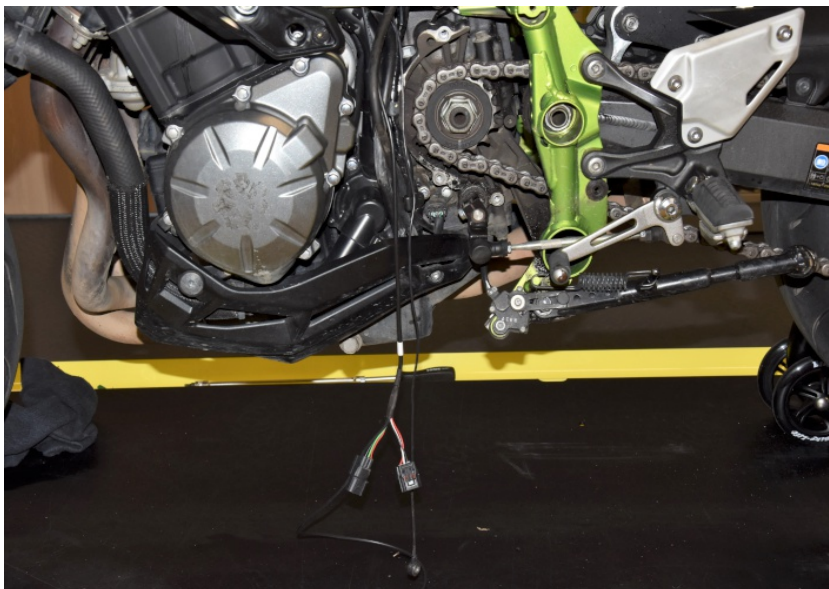


# GIPRO ATRE GEAR INDICATOR

## Supplementary Manual




### Kawasaki Z900 2017- (GPAT-K06)

Plug GPAT G2 connectors inline with the gear position sensor connectors.

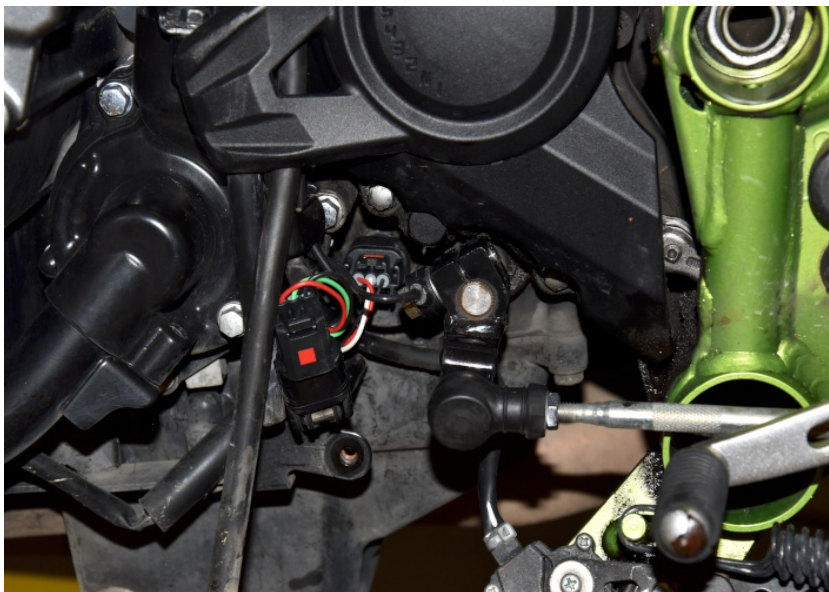

Connect GPAT G2 Red wire to the Brown/Yellow wire of the ABS indicator light at the 2-pole connector.

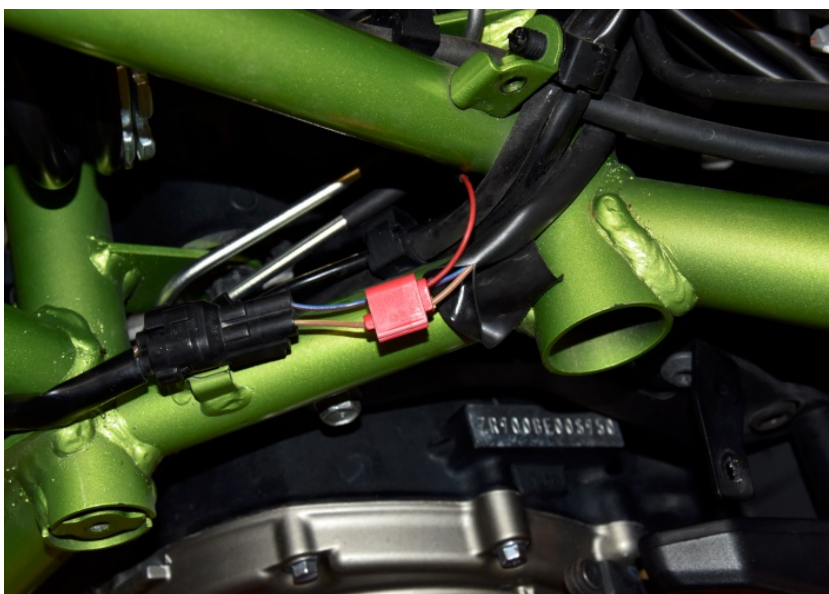

Typical position for the gear indicator.

